


HEATER STACK DETAIL

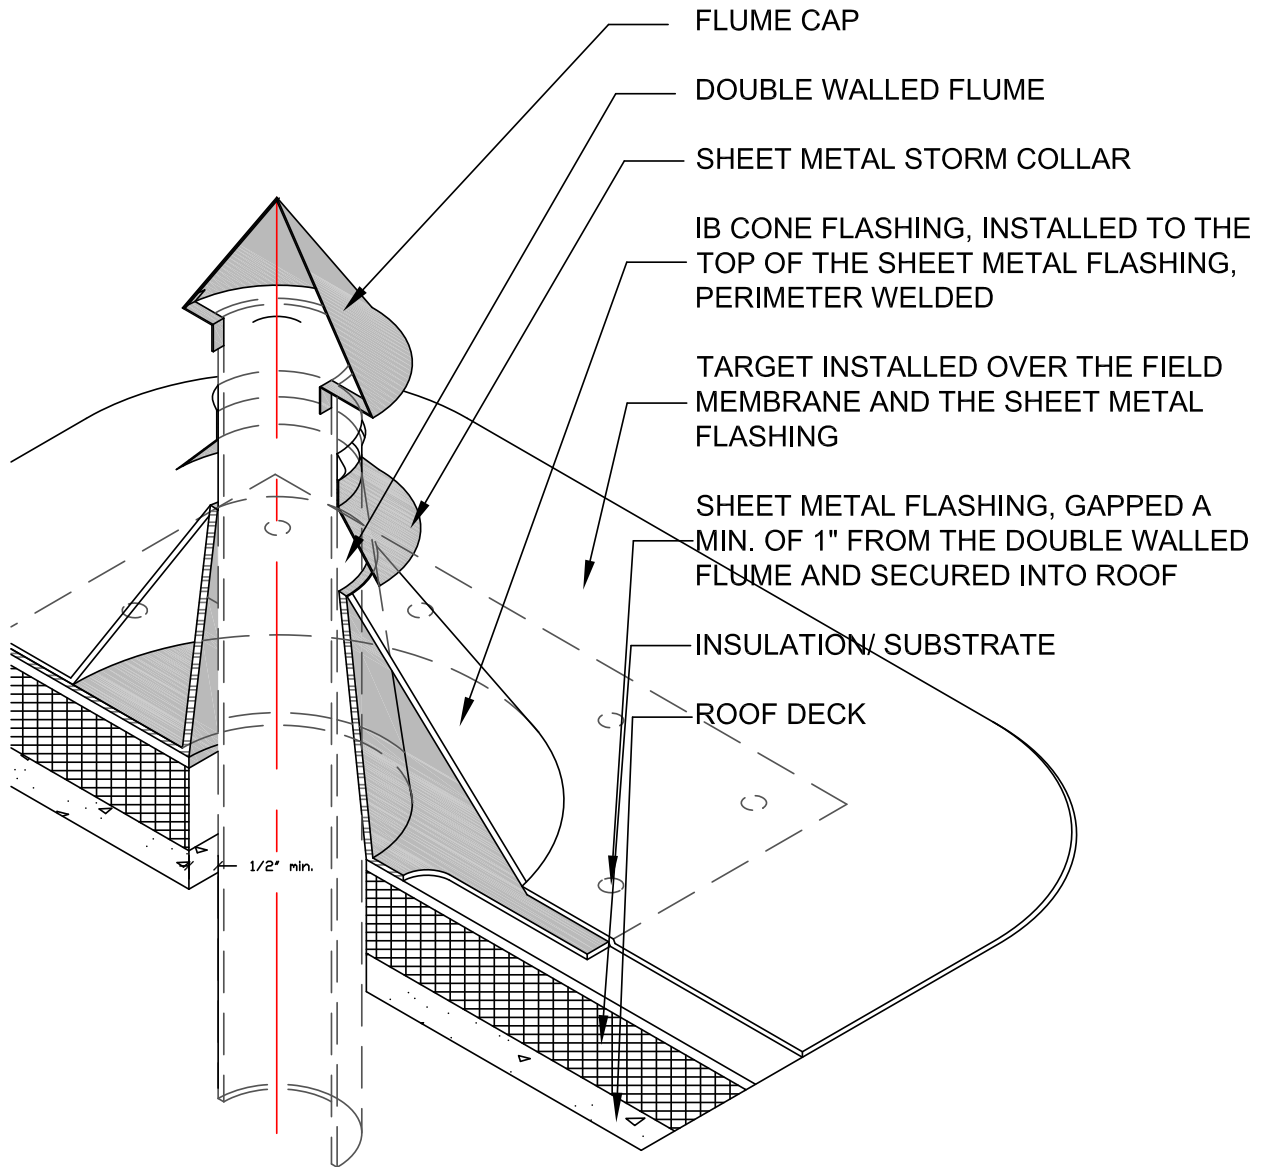

NOTES:

1. THE FOLLOWING DETAIL SHOWN IS TO BE USED FOR HEATED STOVE PIPES, DRYER EXHAUSTS, HEATER FLUMES, ETC.

DO NOT INSTALL IB CONE FLASHINGS DIRECTLY TO A HEATED FLUME. EXTREME FIRE HAZARD WHEN THIS PRECAUTION IS NOT HEADED.

PROJECT NAME:

TITLE:

FP-1 HEATER STACK DETAIL

** Click here to link to the AutoCAD™ drawing*

SCALE: NTS

APPROVED BY:

DRAWN BY: A.SCHWAB

PLOT DATE: 11-08
REV: AS 11-08