


# PVC SCUPPER-DRAIN

AT CRIMPED AREAS, APPLY HEAT FROM HAND WELDER TO SOFTEN, THAN CAREFULLY APPLY EVEN PRESSURE ALONG THE CRIMP TO FORM ANGLE TO MATCH ROOF TO WALL PROFILE

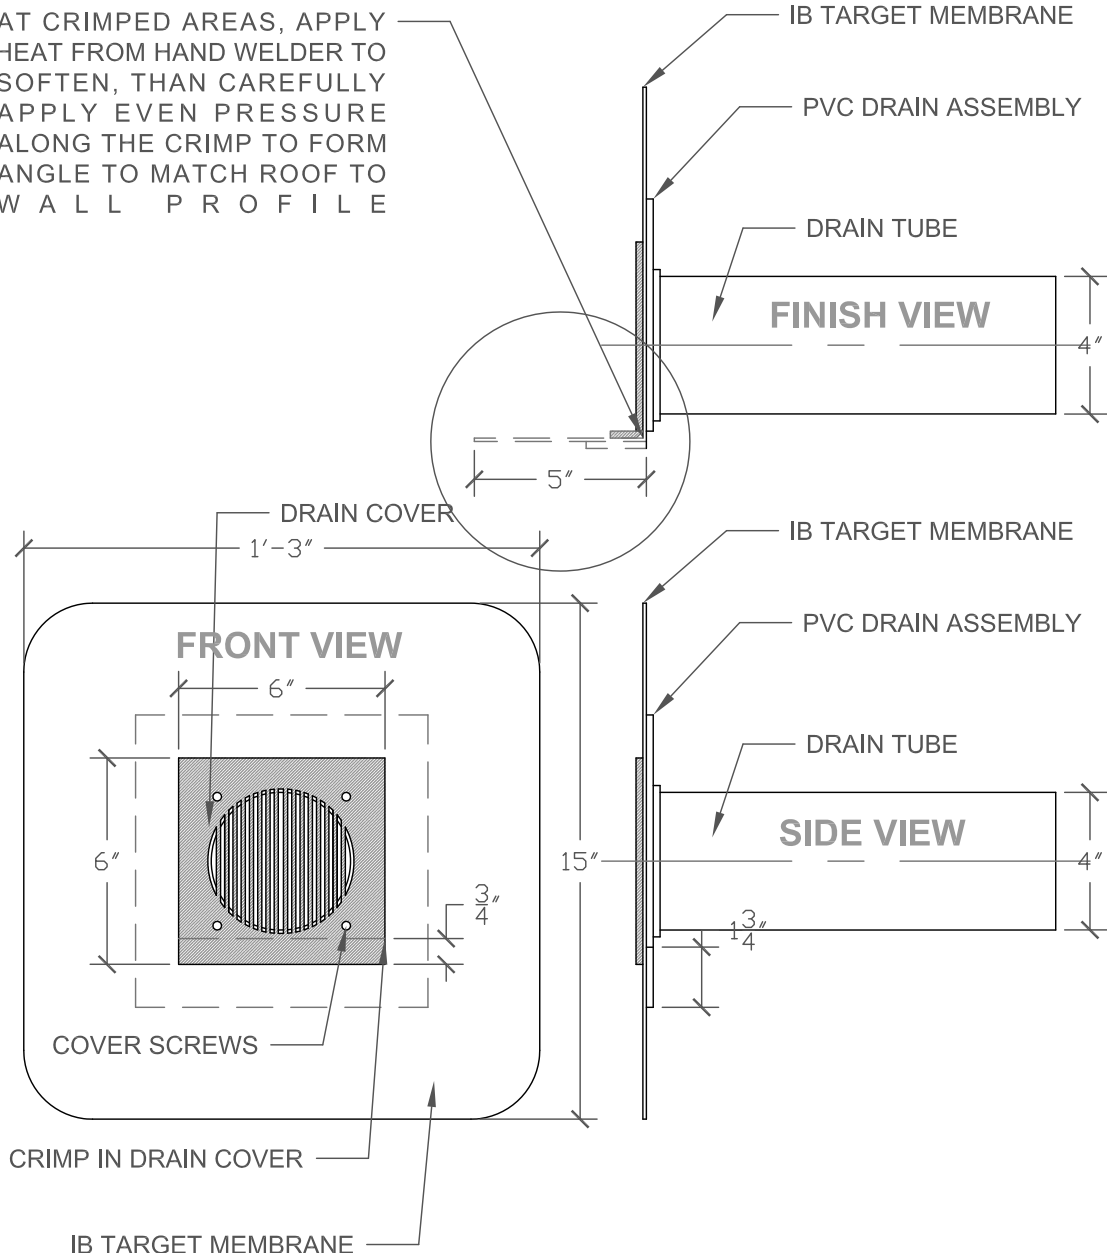

PROJECT NAME:

TITLE:

## FD-6 PVC SCUPPER-DRAIN

*\* Click here to link to the AutoCAD™ drawing*

SCALE: NTS

APPROVED BY:

DRAWN BY: A.SCHWAB

PLOT DATE: 11-08  
REV: AS 11-08